
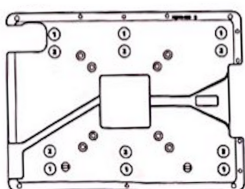


# Free-Standing Instructions

before starting your kiosk journey, please unpack all the hardware, check the parts, and get your tools ready  
(see back for parts & tools)

## 01 BACKPLATE

Connect the backplate of the case to your stand, screwing the four corners in this order: Top left (1) → Bottom right (4) → Bottom left (3) → Top right (2)


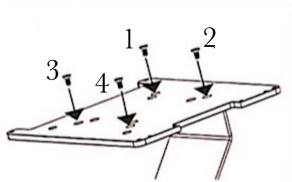


## 02 SHOCK ABSORBERS

Place 6 shock absorbing stickers to the base.

## 03 LOOP CHARGING CABLE

Loop the black charging cable through the middle hole of the base, with the L side coming out through the top.

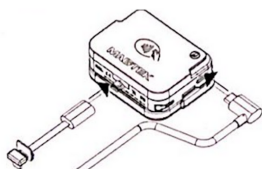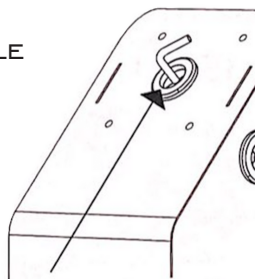

## 04 CONNECT CABLES

Connect the USB-C L-shaped charging cable to your MagTek iDynamo 6 reader.




Connect the yellow ribbon to the card reader with the lightning plug facing down.

## 05 MAGTEK

Place sticky tape on the MagTek below the chip-reader slot.

Push the MagTek into the enclosure with the logo facing up through the hole.

Screw on the enclosure cover.

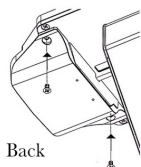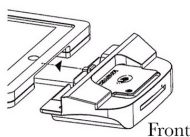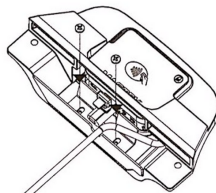

## 06 MAGTEK-TO-BASE

Screw on the MagTek enclosure to the base.


Connect the yellow ribbon lightning cable to the iPad.



# 07

## FACEPLATE




Place iPad on base, and screw on the case faceplate screwing the four corners in this order  
 Top left → Bottom right →  
 Bottom left → Top right.

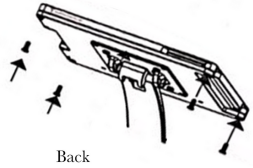


Back

# Parts & Tools

before starting your kiosk journey, please unpack all the hardware, check the parts, and get your tools ready

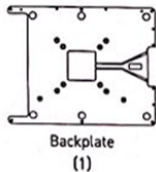

PRO-IP11 ENCLOSURE  
HARDWARE PACK



PRO-IP12 ENCLOSURE  
HARDWARE PACK

