



Table-Top Instructions

before starting your kiosk journey, please unpack all the hardware, check the parts, and get your tools ready
(see back for parts & tools)

01

BACKPLATE

Connect the backplate of the case to your stand, screwing the four corners in this order: Top left (1) → Bottom right (4) → Bottom left (3) → Top right (2)

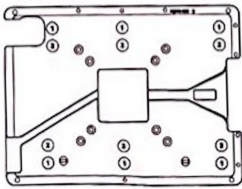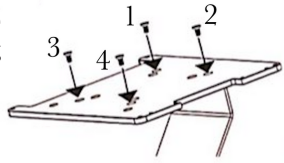

02



SHOCK ABSORBERS

Place 6 shock absorbing stickers to the base & remove the plastic wire management case from your stand.

03

LOOP CHARGING CABLE

Loop the black charging cable through the middle hole of the base, with the L side coming out through the top.

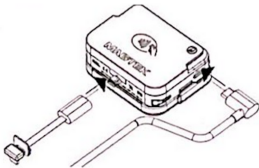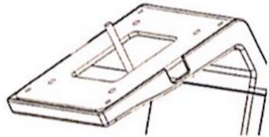

04

CONNECT CABLES

Connect the USB-C L-shaped charging cable to your MagTek iDynamo 6 reader.

Connect the yellow ribbon to the card reader with the lightning plug facing down.



05

MAGTEK

Place sticky tape on the MagTek below the chip-reader slot.

Push the MagTek into the enclosure with the logo facing up through the hole.

Screw on the enclosure cover.

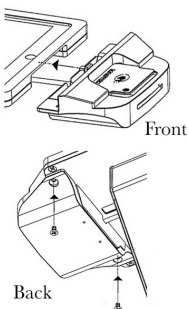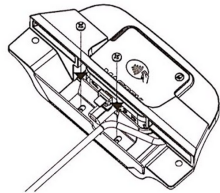

06

MAGTEK-TO-BASE

Screw on the MagTek enclosure to the base.



Connect the yellow ribbon lightning cable to the iPad.



07

FACEPLATE

Place iPad on base, and screw on the case faceplate screwing the four corners in this order
 Top left → Bottom right →
 Bottom left → Top right.

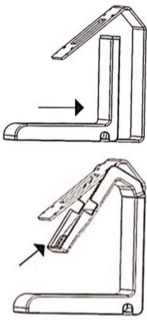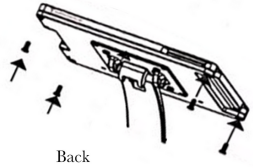






08

PLASTIC CASE

Secure the plastic wire management case.


Parts & Tools

before starting your kiosk journey, please unpack all the hardware, check the parts, and get your tools ready

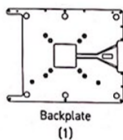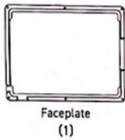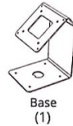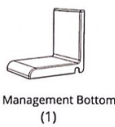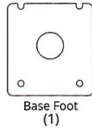

PRO-IP11 ENCLOSURE HARDWARE PACK

PRO-IP12 ENCLOSURE HARDWARE PACK

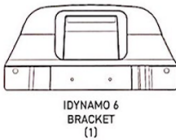

PHILLIPS-HEAD SCREWDRIVER
(NOT INCLUDED)

5/16" ALLEN WRENCH
(NOT INCLUDED - optional)

